


# Recommended Cleaning & Care

BUZIL-WERK Wagner GmbH & Co. KG




## PLASTIC TOILET WALL PARTITIONS

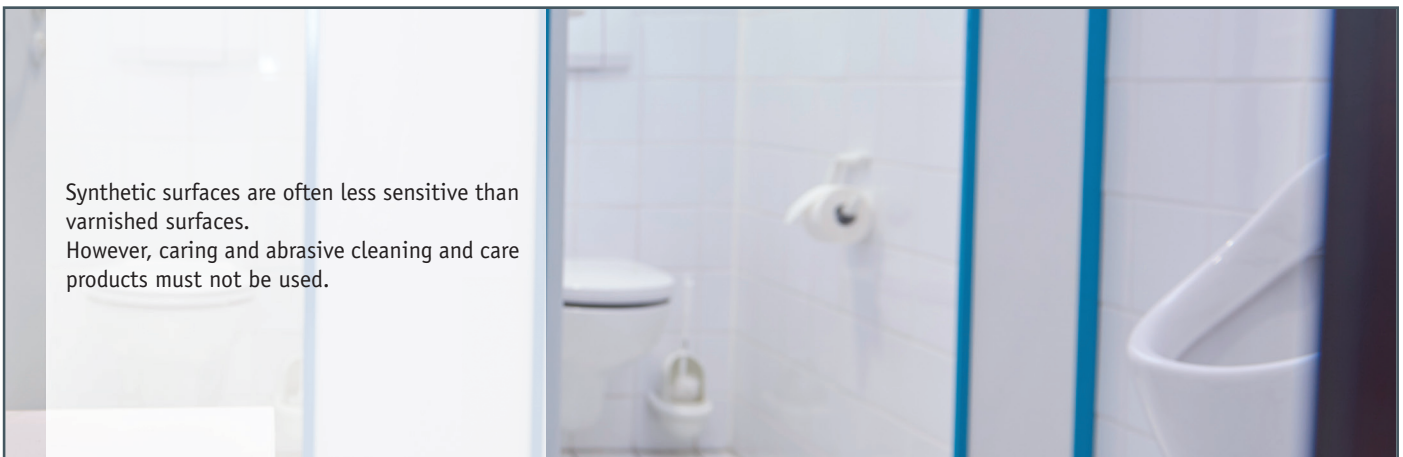



Synthetic surfaces are often less sensitive than varnished surfaces. However, caring and abrasive cleaning and care products must not be used.

### CLEANING

#### DEEP AND INTENSIVE CLEANING

Dirt	Treatment	Cleaning device
<p><b>HEAVIER DIRT THAT IS ALKALINE-SOLUBLE</b></p> <p>like blood, protein, oil and grease or food-stuff residue e.g. coffee, red wine etc. can be removed using Buz® Alkasan G 469 applied by wiping.</p>	Apply the cleaning solution evenly, and leave it to work for a short time.	
	Clean it with a suitable microfibre cloth or hand pad.	
	Pick up the loosened dirt, and rinse with water.	

#### SPECIAL CLEANING


Dirt	Treatment	Cleaning device
<p><b>GRAFFITI</b></p> <p>We recommend Clean UP G 555 for removing graffiti (marker pens, stamping ink, etc.) in indoor areas.</p>	Spray a cleaning cloth or hand pad with Clean UP G 555, and clean the affected areas of the surface.	
	Pick up the loosened dirt, and rinse with water.	

# Recommended Cleaning & Care

BUZIL-WERK Wagner GmbH & Co. KG

## CONTINUED: CLEANING PLASTIC TOILET WALL PARTITIONS

### DAILY ROUTINE CLEANING

Dirt	Treatment	Cleaning device
<p><b>ORGANIC/INORGANIC CONTAMINATION</b></p> <p>like blood, protein, oil and grease or foodstuff residue e.g. coffee, red wine etc.</p> <p>Bucal G 468 is suitable for daily routine cleaning. The Ready-to-use spray cleaner such as Drizzle® Red7 SP 40 are excellent daily routine cleaners for synthetic surfaces.</p>	<p>Apply the cleaning solution to a cleaning cloth or a hand pad, and clean the affected areas of the surface.</p>	
<p><b>INFECTION PREVENTION</b></p>	<p>The products in the Buzil Budenat® portfolio are ideal for infection prophylaxis in defined areas (see Disinfectants).</p>	